




Installation Manual

Musketeer Door

Weathertight

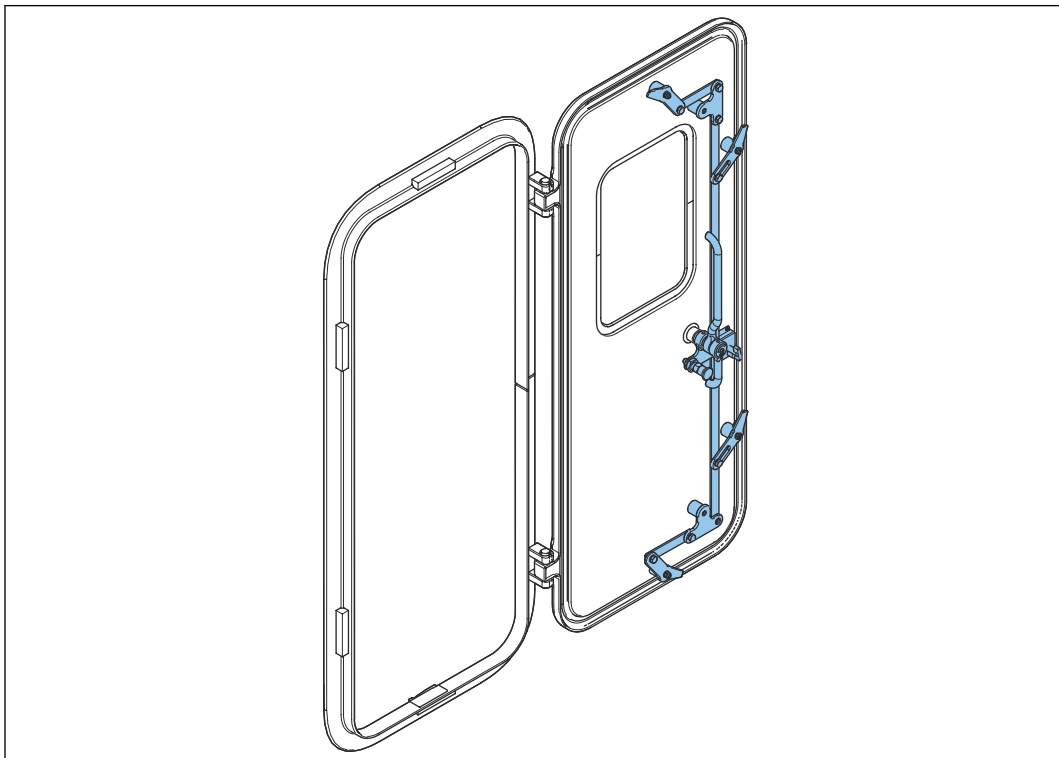

Version: 1.0
Date: March, 2024

Contact information

WINEL BV

Dr. A. F. Philipsweg 55, 9403 AD Assen

P.O. box 70, 9400 AB Assen

The Netherlands

Tel. +31 (0)592 366060

Fax. +31 (0)592 340833

E-mail: info@winel.nl

www.winel.nl

Contents

| | | |
|----------|---|-----------|
| 1 | About this manual..... | 4 |
| 1.1 | Contents of this manual..... | 4 |
| 1.2 | Intended audience..... | 4 |
| 1.3 | Revision history..... | 4 |
| 1.4 | Copyright and disclaimer..... | 4 |
| 1.5 | Symbols used in this manual..... | 4 |
| 1.6 | Related documents..... | 5 |
| 2 | Safety and warranty..... | 6 |
| 2.1 | General safety instructions..... | 6 |
| 2.2 | Specific safety instructions..... | 6 |
| 2.3 | Use of spare parts..... | 6 |
| 3 | Introduction to the product..... | 7 |
| 3.1 | Intended use..... | 7 |
| 3.2 | Product description..... | 7 |
| 3.2.1 | Overview of the product..... | 7 |
| 3.2.2 | Working principle..... | 8 |
| 4 | Installation..... | 9 |
| 4.1 | Delivery, insurance and acceptance..... | 9 |
| 4.1.1 | Delivery..... | 9 |
| 4.1.2 | Insurance..... | 9 |
| 4.1.3 | Acceptance..... | 9 |
| 4.2 | Recommendations for handling and unpacking..... | 9 |
| 4.3 | Storage..... | 10 |
| 4.3.1 | Warehouse storage..... | 10 |
| 4.3.2 | On-board storage..... | 10 |
| 4.4 | Welding..... | 10 |
| 4.4.1 | General welding recommendations..... | 10 |
| 4.4.2 | Welding instruction..... | 10 |
| 5 | Trouble shooting..... | 13 |

1 About this manual

1.1 Contents of this manual

This manual contains information about the installation of the Winel Musketeer door. This manual often refers to the Musketeer door as "the product".

1.2 Intended audience

This manual is intended for:

- Personnel that installs the product.
- Personnel that operates the product.
- Personnel that does maintenance and repairs on the product.

1.3 Revision history

| Version | Date | History |
|---------|-------------|-----------------|
| 1.0 | March, 2024 | Initial version |



1.4 Copyright and disclaimer

© WINEL BV. All rights reserved.

No part of this document may be reproduced, distributed or transmitted in any form or by any means, electronically or mechanically, including photocopying and recording for any purpose, without the express written authorisation by WINEL BV.

WINEL BV continuously improves its products, therefore the designs and specifications in this manual are subject to change without prior notice.

1.5 Symbols used in this manual

| Symbol | Type | Description |
|---|---------|--|
|  | Danger | This indicates a situation with a high level of risk which, if not avoided, can cause death or serious injury. |
| | Warning | This indicates a situation with a medium level of risk which, if not avoided, can cause serious injury or serious damage to the product. |
| | Caution | This indicates a situation with a low level of risk which, if not avoided, can cause minor to moderate injury or damage or the product. |
|  | Note | This provides useful background information that is not hazard related. |

1.6

Related documents

| Document name | Version |
|--|---------|
| Operation & Maintenance Manual Musketeer Door Weathertight | 4.0 |

2 Safety and warranty

2.1 General safety instructions

- Always read the instructions of this product before you operate the product.
- Do not endanger people and the environment. Obey the safety instructions.
- The product must be operated by qualified personnel.
- Follow the maintenance instructions given by WINEL BV. This is in the interest of safety and reliability of the vessel and of its crew and passengers.
- No modification to the product is allowed without prior written approval and permission of WINEL BV and the certifying authorities.
- Disconnect all electrical wiring before welding activities near the product. The welding current can cause damage to the electrics and electronics of the product.
- If the system is not functioning properly, do not try to force the system. Never overrule or ignore safety features.
- Performing proper maintenance and service to the system will prevent most of the malfunctioning.
- Small malfunctions must be solved immediately, if not this might lead to severe damage to the system or injury to operating personnel.

2.2 Specific safety instructions

- Do not use grease on the bearings of these parts:
 - Hinges
 - Handle
 - Cleats

2.3 Use of spare parts

- Only use original WINEL BV spare parts or spare parts that are recommended by WINEL BV.

The use of other parts can result in unsafe operations and severe damage to the equipment, to personnel and to the environment.
- All damage resulting from the use of non-original spare parts is beyond the responsibility of WINEL BV.
- WINEL BV only accepts warranty claims if the maintenance instructions are carefully followed and if original WINEL BV spare parts have been used.

In case of neglected maintenance procedures and mounting non-WINEL BV parts, WINEL BV will not accept any responsibility.

3 Introduction to the product

3.1 Intended use


All doors produced by Winel BV are manufactured according to special customer requirements as well as to SOLAS and IMO regulations.

The doors are designed to allow the passage of people and goods through a weathertight bulkhead when opened. When closed, the doors maintain the weathertight integrity of the bulkhead in which the door is fitted.

Every door is factory tested and adjusted as far as possible. On site installation is therefore limited to welding of the frame into ship construction and adjustment of cleats/ hinges.

3.2 Product description

3.2.1 Overview of the product

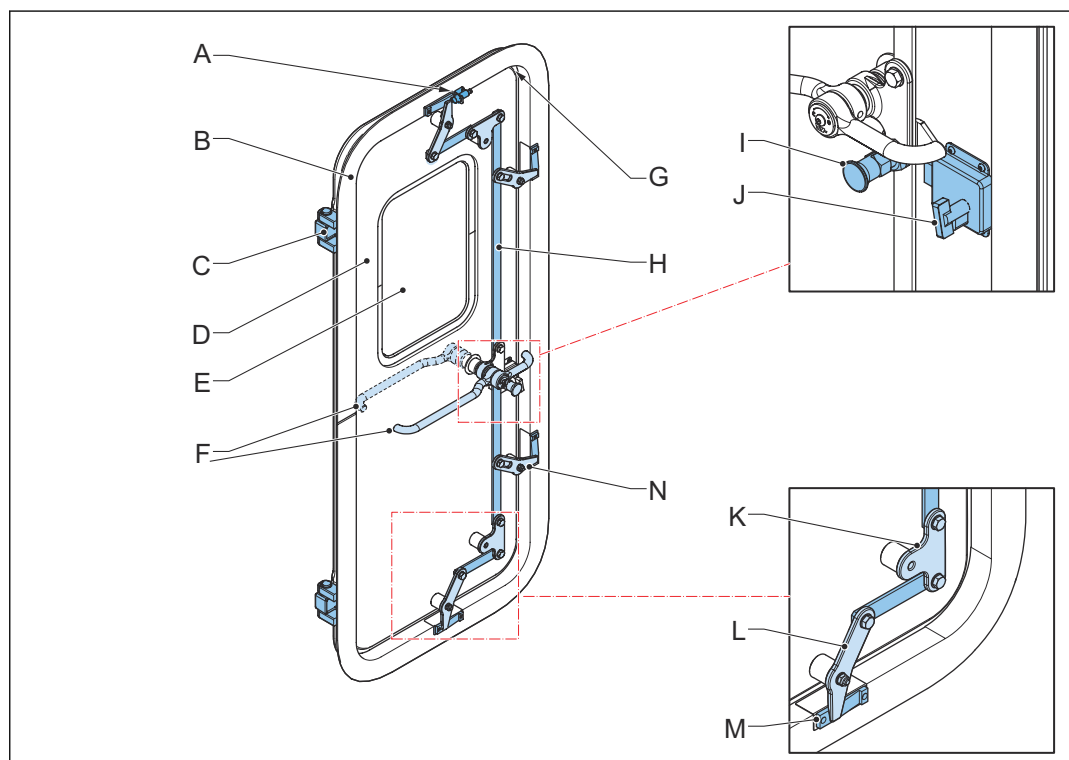

- A. Sensor (option)
- B. Frame
- C. Hinge, with maintenance-free self-greasing bushes
- D. Doorblade
- E. Window (option)
- F. Handle
- G. Rubber gasket
- H. Latching device

- I. Deadbolt lock (option)
- J. Lock pin inside only (option)
- K. Corner piece
- L. End cleat
- M. Wedge
- N. Cleat

For specific details about the door installed on the vessel, refer to the general arrangement drawings and the documentation enclosed.

3.2.2 Working principle

The user can open and close the door with the handle or hand wheel on the door from both sides. The handle or hand wheel operates the latching device.

When the door is closed and latched correctly, the compression of the gasket makes the door weathertight.

4 Installation

4.1 Delivery, insurance and acceptance

4.1.1 Delivery

The product including the frame is placed on a pallet and strapped with bands. All components are premounted if possible. If necessary, depending on the scope of supply, components are delivered separately.

4.1.2 Insurance

The responsibilities of transport and insurance are stated in the sales order confirmation and in the general conditions of sale of WINEL BV.

4.1.3 Acceptance

During acceptance of the delivery, WINEL BV recommends to proceed as follows:

Procedure

1. WINEL BV recommends to have an authorized official of the transportation company present during this procedure.
2. Check if the packing and all the pallets and/or boxes are undamaged and if all parts are present.
 - a) Compare the labels with the WINEL BV packing list and the order confirmation.
 - b) If there is damage or if parts are missing, immediately report this to the sales department of WINEL BV.

4.2 Recommendations for handling and unpacking

General

- Use a fork lift or a hoist to transport the pallets or the boxes as closely to the installation site as possible.
- Do not use hooks or other tools that may penetrate the packing and cause damage to the packed items.
- Only use lifting equipment with adequate capacity for the load.

For the weights and dimensions of the delivery, refer to the General Arrangement drawings enclosed.

- Only unpack the parts in the cardboard boxes just before you install them. This prevents parts from being lost.
- Use a sharp knife to open the cardboard boxes but take care not to cause damage to the parts inside the boxes.

Door/hatch assembly (frame with door/hatch and components)



Danger:

- The product is heavy.
- Use correct and certified lifting materials.
- Only authorized personnel are allowed to operate the lifting equipment.
- Follow the appropriate safety procedures.

- Remove the bands that hold the product to the pallet.
- Make sure that the door or hatch is secured in the closed position. This prevents that the door or hatch moves during the lifting operation.
- Use at least two steadying lines to guide the product during the lifting operation.

4.3 Storage

4.3.1 Warehouse storage

- Store the parts in a safe, dry and dust free environment.
This prevents unnecessary damage and wear of the parts.
- If the parts were unpacked from their transport packing, repack the parts using appropriate packing materials.
- Use the original WINEL BV pallet to store the product.
- Do NOT stack pallets with the products on top of each other.

4.3.2 On-board storage

- Store the parts as close as possible to the future position.
- Make sure to place the door assembly at the correct side of the bulkhead.
- Make sure to protect the parts from damage caused by work in the vicinity of the parts.
- Re-pack or cover the door assembly and the other parts in order to prevent damage by grinding or welding nearby.

4.4 Welding

4.4.1 General welding recommendations



Danger:

- Welding the frame into or against the structure must be done by a certified and qualified welder and according to the requirements of the shipyard and the applicable class society.
- WINEL BV cannot be held responsible if the welding recommendation and the advised welding procedures were not followed.


WINEL BV can only make welding recommendations with respect to the product, not with respect to the construction of the vessel to which the product is installed.

4.4.2 Welding instruction



Caution:

If you do not obey these instructions, you may cause damage to the product and the watertightness of the product is not guaranteed.

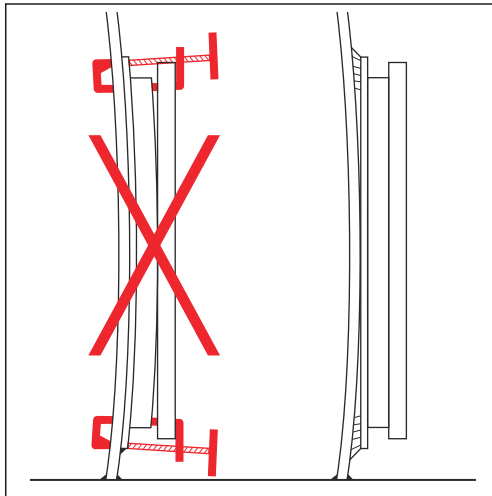

Caution:




Keep both door and frame straight. Do not force it towards the bulkhead. Do not force the doorframe, for example with clamp tools.

- Close and latch the door on the frame. Keep the door closed during the entire welding procedure.
- Welding must be done carefully to prevent thermal stresses in the door.
- Make sure that the heat-dissipation into the door is as little as possible.
- Refer also to the instruction on the door.
- Weld also the backside of the doorframe by interrupted welding.
- Refer to the illustration, start at position 1, interrupted welding (length \pm 100mm). Follow to position 2 – 3 – 4 etc.
- Complete the welding: Fill the open spaces between doorframe and wall.

Caution:



Max frame deflection after welding to ship construction: 1mm / mtr

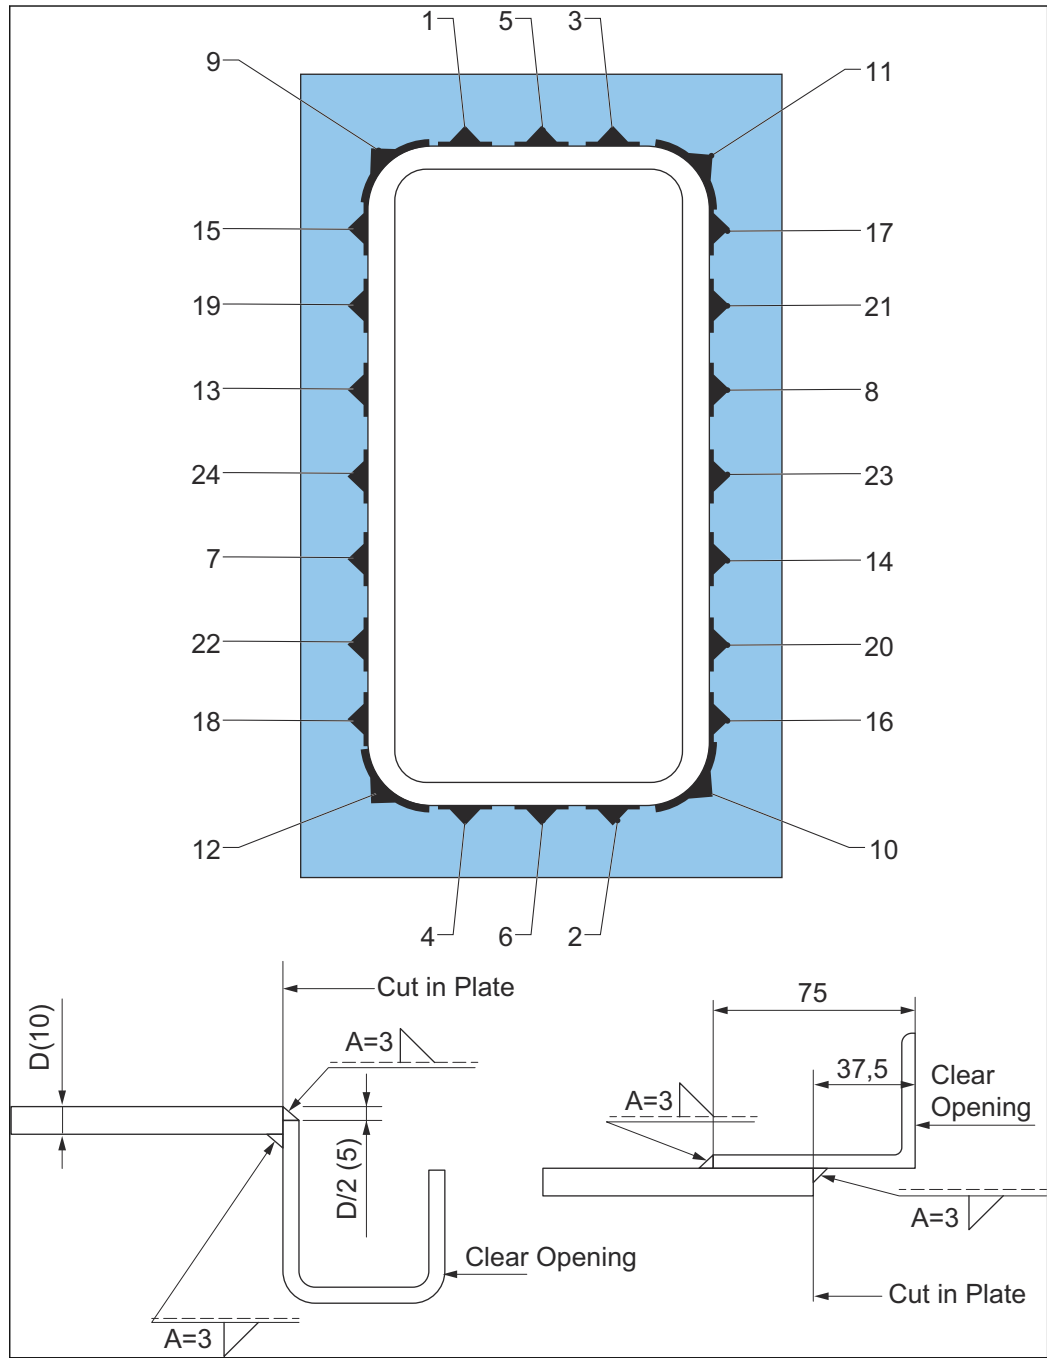

5 Trouble shooting



Warning:

Always read the safety instructions §2 of the manual before trouble shooting.

Do not endanger people and the environment. Obey the safety instructions.

| Fault | Possible cause | Check | Remedy |
|---|--|--|---|
| Door cannot be opened or closed with handle | Bolts in cleating system come loose | Cleating system | Place new bolts/nuts (apply locking fluid) |
| | Safety bolt of handle is broken | Safety bolt operating handle | Place new bolt (apply locking fluid) |
| Door does not close well | Damage on frame, door, rubber gasket, musketeer system, door frame is bent | Complete system, door, rubber gasket and frame | Repair and/or replace damaged pieces and/or parts. Then adjust cleating system and hinges |
| Door is leaking | Rubber gasket is compressed too little | Rubber gasket, cleating and hinges | Replace rubber gasket and/or adjust cleating system and hinges |
| | Damage on frame, door, rubber gasket, musketeer system, door frame is bent | Complete system, door, rubber gasket and frame | Repair and/or replace damaged pieces and/or parts. Then adjust cleating system and hinges |
| Door not operating correct and/or too heavy | Rubber gasket is compressed too much | compression of the rubber gasket when door is closed and latched | Adjust cleating system and hinges |
| | No grease on wedges | Wedges | Apply grease to wedges |
| | Sticking of handle in bush | Handle | Disassemble handle and clean or replace handle and/or bushes |
| | Cleating rod is bended | Cleating system | Repair or replace damaged parts |
| | Damage on frame, door, rubber gasket, musketeer system, door frame is bent | Complete system, door, rubber gasket and frame | Repair and/or replace damaged pieces and/or parts. Then adjust cleating system and hinges |
| | Paint on system parts | Parts that should not be painted for paint | Remove the paint |

If the problems cannot be solved using the instructions in the manual, contact WINEL After-sales department.